

	Global Doc Code:	FE10201F0
	Revision:	V1.0
CARD SERIES WearHeld Scanner Setup Manual	Page:	1 of 5

Preparation before setting up:

- a. Ensure that the CARD scanner is in normal power-on state.
- b. Ensure that the CARD scanner has sufficient battery power.
- c. It is advisable to have the beeper of the CARD scanner engine in an audible state to facilitate the identification of operational changes during setup.

This manual primarily provides instructions for setting up the engine on the scanner by scanning barcodes, enabling various personalized basic functionalities. For more advanced features, operators can refer to the respective engine's detailed manual for implementation.

In each setting, the default value is indicated by an asterisk " ** ".

	Global Doc Code:	FE10201F0
	Revision:	V1.0
CARD SERIES WearHeld Scanner Setup Manual	Page:	2 of 5

The following applies to:

**CARD2-lite CARD3-basic CARD3-laser
CARD5-lite CARD6-laser**

To restore the scanner to its factory default engine settings:



Restore Defaults**

Function settings:

1. Add the suffix of the barcode characters: <Barcode><Suffix>

- a. Add Enter key Suffix**: 7013**



<Barcode><CR/LF>**

- b. Add Carriage Return Character Suffix: 1013



<Barcode><CR>

- c. Add Line Feed Character Suffix: 1010



<Barcode><LF>

- d. Add Tab key Suffix: 7009



<Barcode><TAB>

- e. Add Space character Suffix: 1032

	Global Doc Code:	FE10201F0
	Revision:	V1.0
CARD SERIES WearHeld Scanner Setup Manual	Page:	3 of 5



<Barcode><SPACE>

f. Cancel Suffix:



<Barcode>

2. To configure the beeper sound of the engine (decode confirmation sound):

a. Scan one of the following barcodes to select whether or not the decoder beeps after a good decode:

a) Enable Beep After Goodread** :



b) Disable Beep After Goodread :



b. Scan one of the following barcodes to select a beep volume:

a) Setup Beep Volume --- High** :



b) Setup Beep Volume --- Medium :



c) Setup Beep Volume --- Low :



c. Scan one of the following barcodes to select the duration for the good decode beep:

a) Setup Beep Duration --- Long :



b) Setup Beep Duration --- Medium** :



c) Setup Beep Duration --- Short :

	Global Doc Code:	FE10201F0
	Revision:	V1.0
CARD SERIES WearHeld Scanner Setup Manual	Page:	4 of 5



d. Scan one of the following barcodes to select a beep tone for audible feedback indicating a good decode :

a) Setup Beep Tone --- High :



b) Setup Beep Tone --- Medium** :



c) Setup Beep Tone --- Low :



3. To configure the Aiming Pattern of the engine:

a. Enable Aiming**:



b. Disable Aiming:



The following applies to:

CARD2-CCD

To restore the scanner to its factory default engine settings:



Restore Defaults**

	Global Doc Code:	FE10201F0
	Revision:	V1.0
CARD SERIES WearHeld Scanner Setup Manual	Page:	5 of 5

Function settings:

1. Add the suffix of the barcode characters: <Barcode><Suffix>

a. Add Carriage Return and Line Feed character Suffix:



<Barcode><CR><LF>

b. Add Carriage Return character Suffix : 1013



<Barcode><CR>

c. Add Line Feed character Suffix : 1010



<Barcode><LF>

d. Cancel Suffix **:



<Barcode>**